
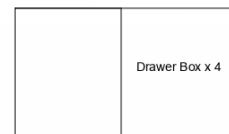
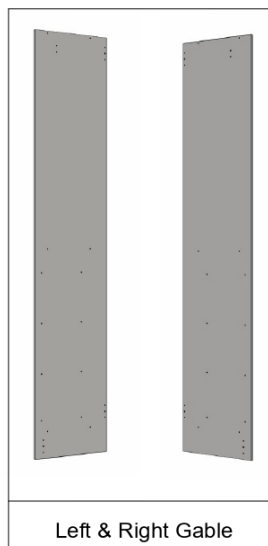
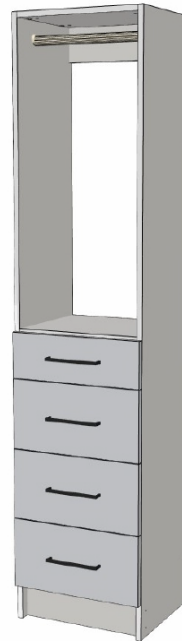





Tall 4 Drawer Hang (T4DH) Included in Closet Models: Standard 1-6



ORDER OF ASSEMBLY/STEPS

Preparing the Gables: Begin by laying both Gables face up on cardboard or a cloth. This smart move helps to prevent any scratches or damage to the unit.

Attaching the First Screws: Screw B comes into play here! Attach it to the left and right Gables as shown in Diagram F. It's an important step to get right.

Toe Kick and Nailer Installation: Turn one of the gables on the floor so that the front edge is facing up. Attach the Toe Kick and Nailer using Screw A.

Top Shelf Assembly: Stay with the same gable and lay it down to attach the Top, Fixed Shelf using Screw B.

Second Gable Placement: Now, take the second Gable and place it on top of the Fixed Shelf, Top, Nailer. Tighten it to Screw B with a screwdriver.

Securing the Toe Kick and Nailer Again: Repeat the Toe Kick and Nailer attachment, this time using Screw A again.

Deck Attachment: Attach the Deck to Screw B and make sure it's tightened with a screwdriver.

Adding Component P: Next up, attach Part P using Screw G, as per the details in Diagram.

Upright Positioning: Stand the cabinet upright against the wall.

Final Steps: After all the cabinets for this room are assembled, don't forget to refer to the installation drawing and follow the next steps as instructed.

Note: the **closet rod** should be installed after the unit is affixed to the wall.

Diagram F

