
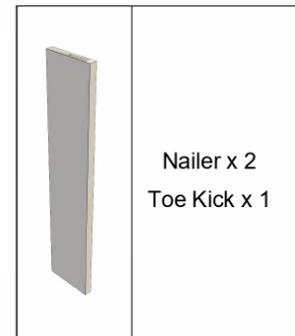
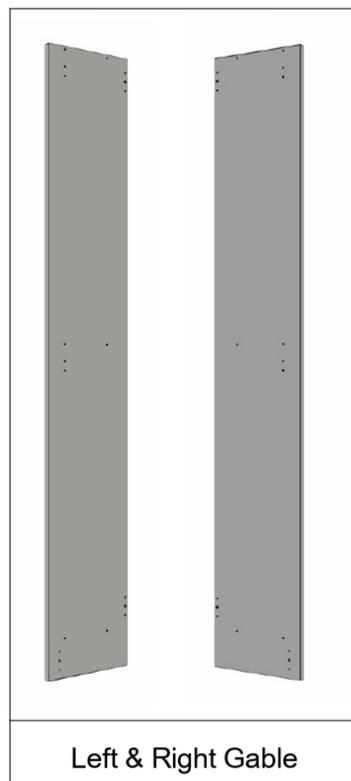
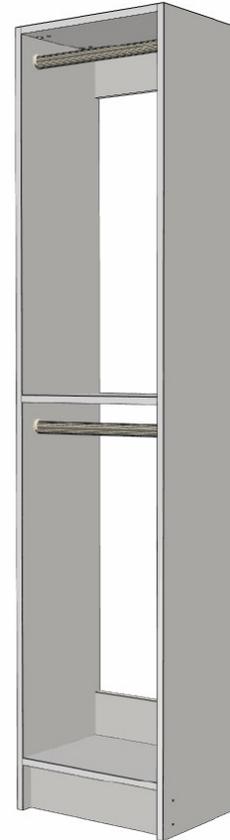



Tall Double Hang (TDH) Included in Models: Basic 8,11 and Standard 2,3,4,5 & 6



ORDER OF ASSEMBLY/STEPS

Prepare the Gables: Begin by laying both gables face up on cardboard or cloth. This is to make sure you don't scratch or damage the unit. Safety first!

Attaching Screws to Gables: Now, take Screw B and attach it to both the right and left Gables as shown in Diagram C. This is your first big step in assembly!

Adding More Parts: Using Screw G, attach part M/O to both the left and right Gables. You'll find the specifics in Diagram C.

Toe Kick and Nailer Installation: Choose one of the gables and lay its front edge on the floor. Then, attach the Toe Kick and Nailer using Screw A.

Assembling the Top Shelf: Keep the same gable laid down and attach the Top, Fixed Shelf using Screw B and a screwdriver.

Attaching the Second Gable: Take the second Gable and place it on top of the Fixed Shelf, Top, Nailer. Tighten it to Screw B using your screwdriver.

Securing the Toe Kick and Nailer: Again, use Screw A to attach the Toe Kick and Nailer.

Deck Attachment: Attach the Deck to Screw B and tighten it with the screwdriver.

Upright Positioning: Carefully stand the cabinet upright against the wall.

Final Steps: After assembling all the cabinets for this room, refer to the installation drawing and follow the instructions for the next steps.

Note: the **closet rod** should be installed after the unit is affixed to the wall.

Diagram C

