

Tall Hang Shoe (THSHOE) Included in Models: Basic 11 and Standard 5

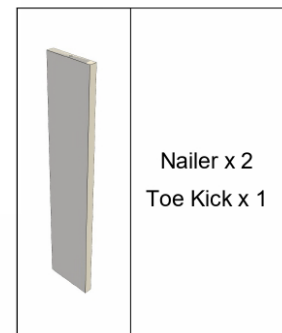
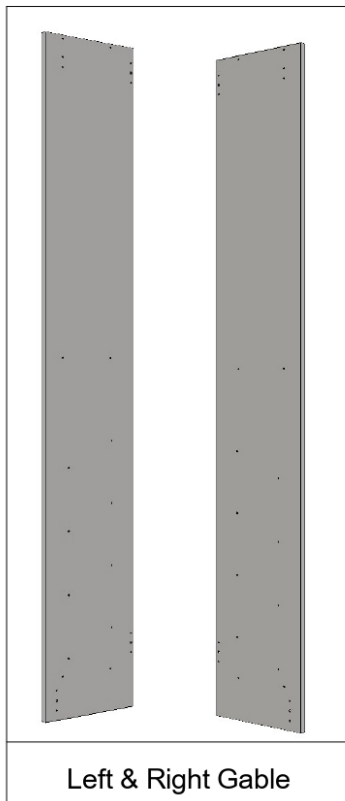
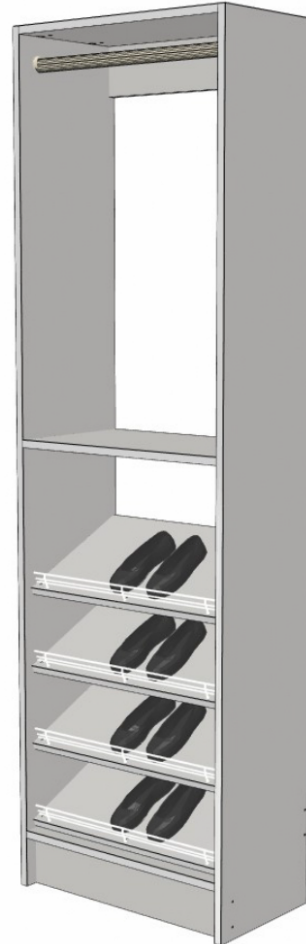




Diagram E

### ORDER OF ASSEMBLY/STEPS

**Getting Started with the Gables:** Begin by laying down both gables face up on a piece of cardboard or cloth. This is a great way to protect your unit from any scratches or damage.

**First Steps with Screws:** Attach Screw B to the left and right Gables as shown in diagram E. It's the first step towards building your shelf!

**Adding More Components:** Now, with Screw H, attach part M/O to both the left and right Gables, following the guidance in the diagram.

**Toe Kick and Nailer Installation:** Turn one of the gables on the floor to expose the front edge and attach the Toe Kick and Nailer using Screw A.

**Assembling the Top and Fixed Shelf with Rail:** On the same gable, lay it down and attach the Top, Fixed Shelf, and Fixed Shelf with Rail to it using Screw B.



**Second Gable Installation:** Take the second Gable and place it on top of the Fixed Shelf, Top, Fixed Shelf with Rail, and Nailer. Tighten it to Screw B using a screwdriver.

**Securing the Toe Kick and Nailer to the Second Gable:** Use Screw A to attach the Toe Kick and Nailer once more.

**Deck Attachment:** Attach the deck to Screw B and tighten it using the screwdriver.

**Upright Positioning:** Carefully stand the cabinet upright against the wall.

**Final Steps:** Once all the cabinets for this room are assembled, refer to the installation drawing and follow the instructions for what to do next.

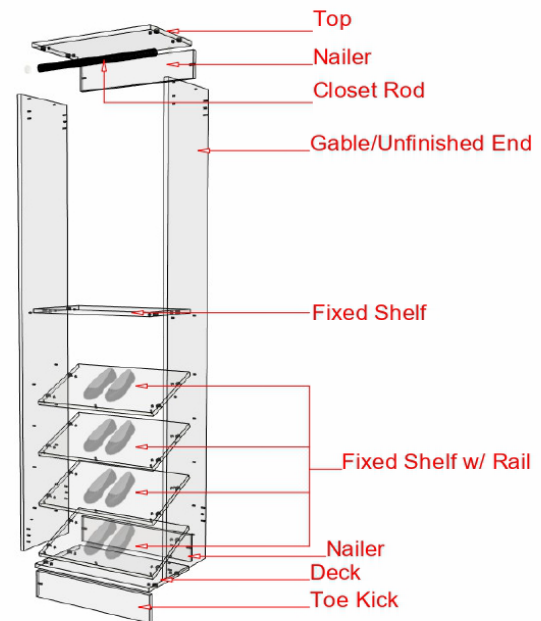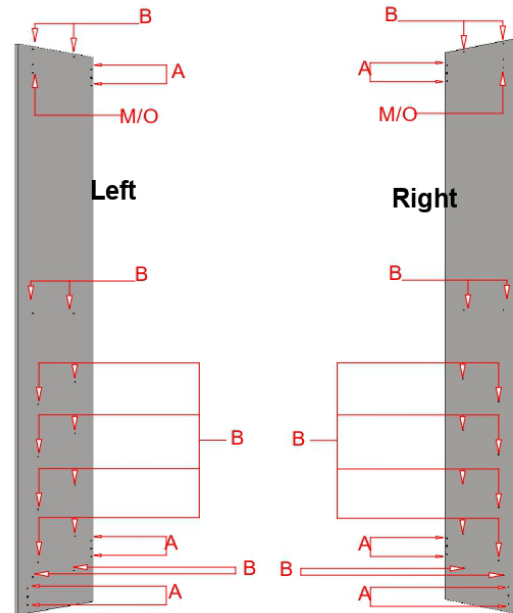

Note: the **closet rod** should be installed after the unit is affixed to the wall.